


E-Swift 3: Upgrade kit Window fixing screws

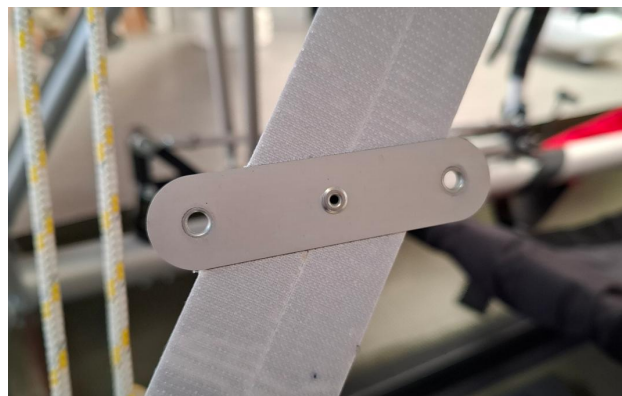

Revision Record

Rev.	Date	Modified by	Description of Changes	Pages
1.0	24/2/2026	V. PIRET	1st issue	All

Contents

1	Kit contents.....	3
2	Tools needed.....	3
3	Installation.....	3
4	Instruction for use	6

1 Kit contents


- SW3_35750 Double nut plate 4 x
- Washerhead screws M5 10 x
- Extra-flat head rivets 3,2 x 8 à tête extra plate 6 x
- Drill bit for steel 3.3 mm 1 x
- Drill bit for wood 7 mm 1 x


2 Tools needed

- Cordless drill
- Cutter with a new blade
- Rivet gun
- Marker with fine point
- A small ruler
- 3 mm allen key

3 Installation

- Remove the 2nd and 4th rivets from the window fixing plate:
use the 3.3 mm drill bit. If necessary, first push the nail back using a narrow nail punch.
- Position the double-nut plate, centered on the rivet hole, perfectly horizontal, and mark the edges on the Velcro with a pencil.
- Remove the Velcro where the part will be installed:
Using a ruler and a cutter with a new blade, cut the Velcro along the pencil lines, then peel the velcro.
- Place the double-sided tape where the double-nut plate will be installed. Cut the ends along the edges of the fixing plate.
- Remove the backing from the double-sided tape and install the double-nut plate. Degrease the plate beforehand with alcohol.
- Using a rivet gun, rivet the double-nut plate.
- Do the same for each double-nut plate.
- Install the windows perfectly and mark the position of the screw holes on the windows.
- Remove the windows and drill the holes with the drill bit provided, pressing the area to be drilled against a piece of wood.

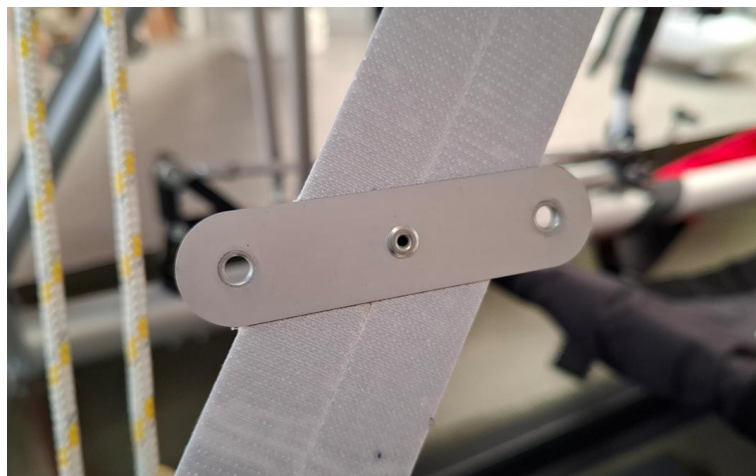

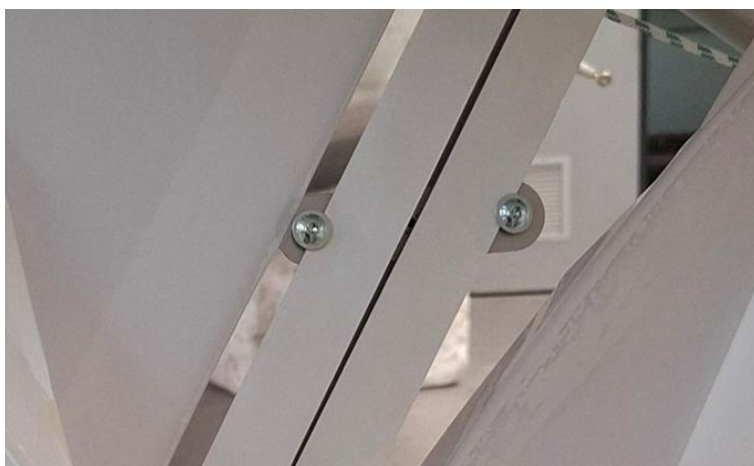

4 Instruction for use

- Install the windows normally, making sure that the holes drilled in the windows are aligned with the nuts.
- Screw in the screws without tightening them too much.